


## TECH NOTE CT-04/12 Current Transformer


Rev. 1.0

### CT inside the capacitive coupling discharge path

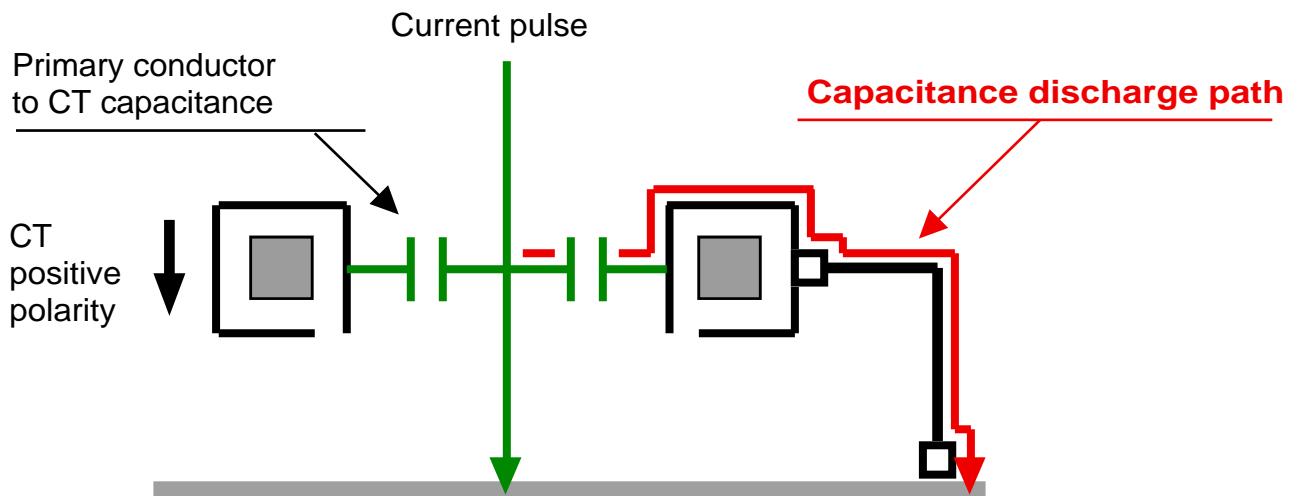

The parasitic capacitance between the primary conductor and the CT shell gets charged  
The CT core, being *inside* the current loop, measures the parasitic capacitive discharge

### CT outside the capacitive coupling discharge path

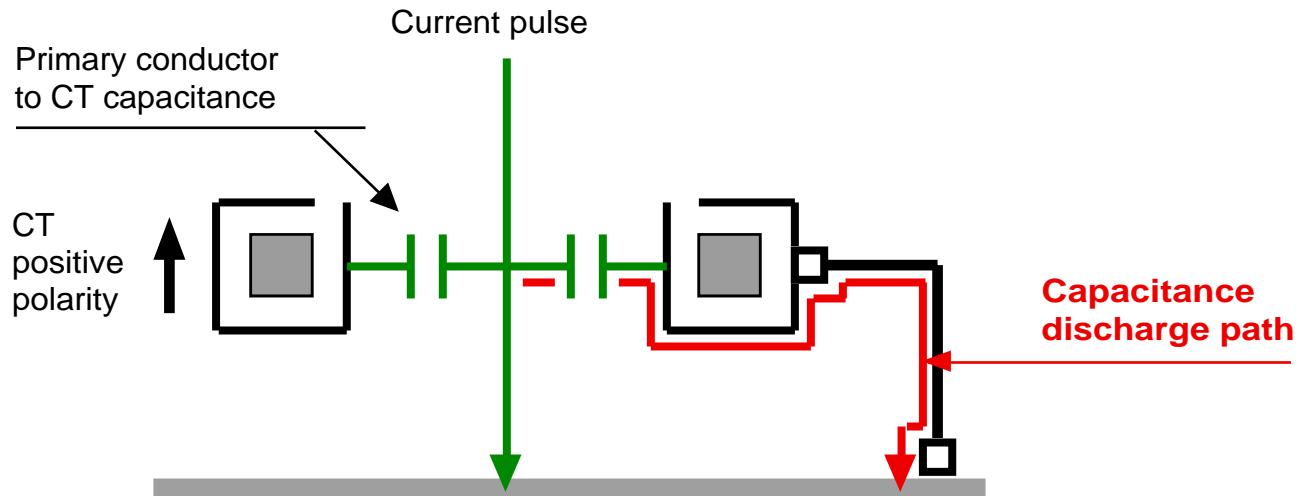

The parasitic capacitance between the primary conductor and the CT shell gets charged  
The CT core, being *outside* the current loop, ignores the parasitic capacitive discharge